

EZIPRIME®

CHARGING INSTRUCTIONS

1. Insert the detonator until it reaches the bottom of the capwell.



2. Clip the shock-tube into the retention lug




3. EZIPRIME® must be forward primed in the borehole.



JOHNEX
explosives
AUSTRALIA'S EXPLOSIVES INNOVATORS

IMPORTANT!

EZIPRIME®
MUST BE
FORWARD
PRIMED

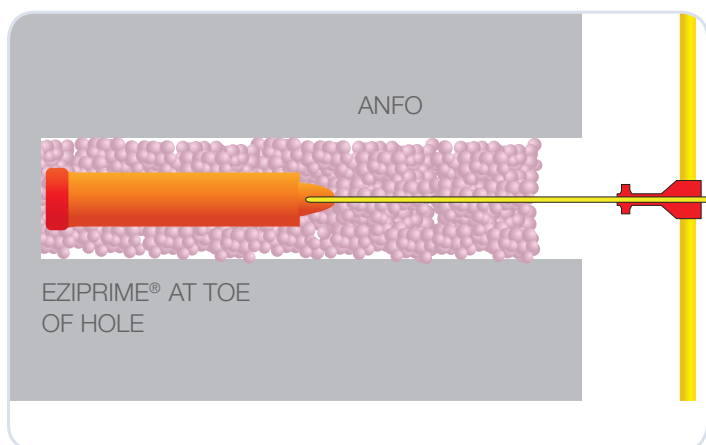

JOHNEX
explosives
AUSTRALIA'S EXPLOSIVES INNOVATORS