

EZIPRIME®

CHARGING INSTRUCTIONS

1. Insert the detonator until it reaches the bottom of the capwell.



2. Clip the shock-tube into the retention lug




3. EZIPRIME® must be forward primed in the borehole.



IMPORTANT!

EZIPRIME®

MUST BE FORWARD PRIMED

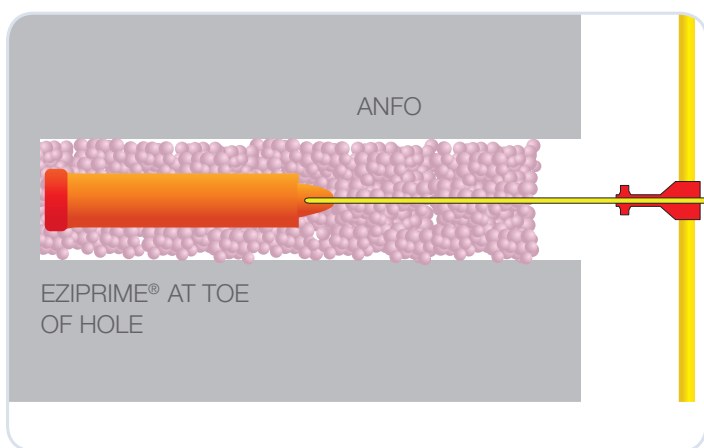

JOHNEX
explosives
AUSTRALIA'S EXPLOSIVES INNOVATORS