

## OZIPRIME® High Explosives Primer

### RECOMMENDATION FOR USE

#### Charging with OZIPRIME®

1. Insert the detonator through the top hole first.




2. Pull the shock-tube through and insert the detonator until it reaches the bottom of the capwell.



3. Clip the shock-tube into the retention lug to secure.



4. OZIPRIME® must be forward primed in the borehole.

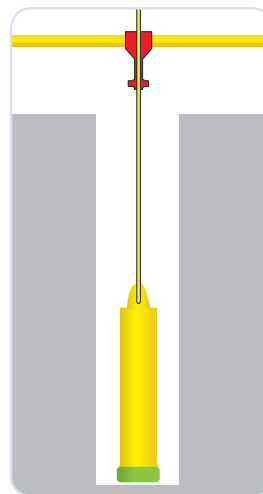

OZIPRIME® AT TOE OF HOLE