


MIGHTY ATOM Pentolite primer


RECOMMENDATION FOR USE

Charging with Mighty Atom

1. Insert the detonator until it reaches the bottom of the capwell.

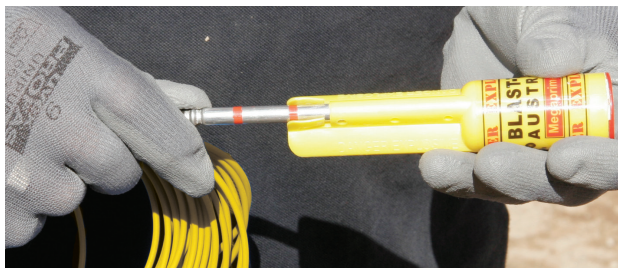

2. Clip the shock-tube into the retention lug

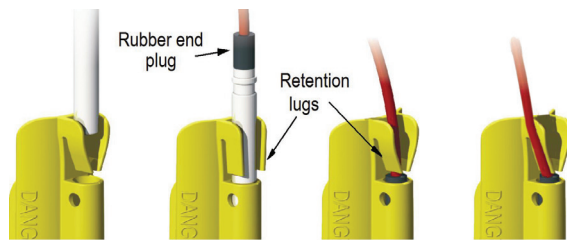

3. Insert the Mighty Atom's loading guide onto the end of the ANFO hose.



4. Push the ANFO hose and the Mighty Atom down the borehole, ensuring that the primer is at the butt.
5. Charge the borehole as normal with ANFO or emulsion.

